Code: STHOOP45 - (.925) Add-A-Bead

<u>Instructions how to create an earring using the earring finding,</u> "Add-A-Bead".


Also instructions how to insert completed earring into the ear piercing.

Design the earring by threading on beads or drops onto the hoop.


The add-a-bead is a 45mm diameter hoop.

The wire at one end is flat and has a hole through it, (this is part of the closure)

Diagram (a)

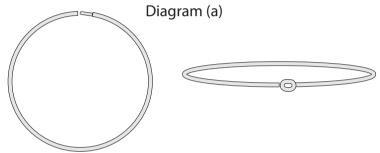

1. After threading on beads; to complete the earring, grip the wire with chain nose pliers (opposite the flattened wire). Bend the wire slightly over 90 degrees. The turn up should be approximately 3mm (no less) to create a secure attachment when the closure is in place. Diagram (b)

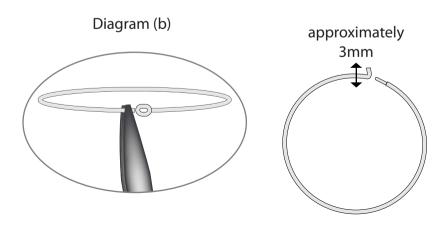

2. The add-a-bead is secured by the turn up sitting inside the hole, Diagram (c)



To place the earring into the ear

3. Push the little turn up into the piercing. Diagram (d) (this position means the earring is facing the wrong way, back to front). As the turn up goes into the ear piercing, you must then rotate the earring 180 degrees (half a turn, the direction of which is dependent on whether you are left or right handed), so the flattened hole of the earring fitting, now sits behind the ear lobe and the wire has inserted its self through the ear piercing during the turn. Diagram (e)

Finally insert the turn up of the ear fitting into the loop on the other side of the ear fitting to secure. To remove is just simple, unhook and gently pull out. Diagram (d)

